 




I-CX 3

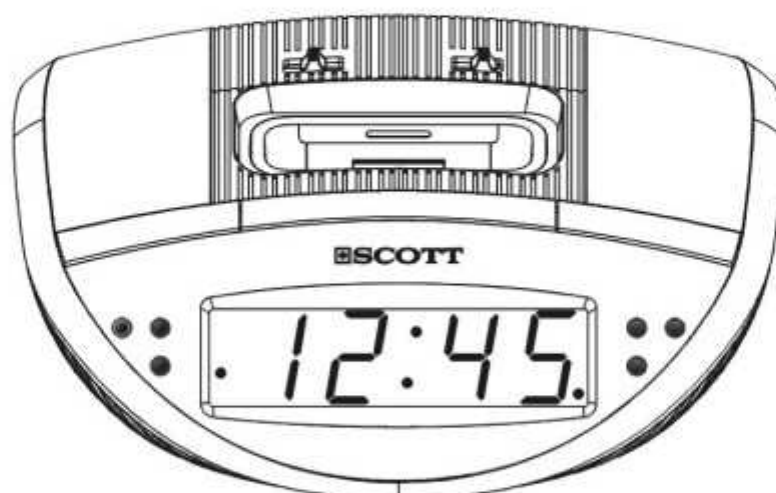

## ALARM CLOCK RADIO WITH iPod DOCKING STATION



Instruction Manual



## PRECAUTIONS

Follow the instructions below to ensure the product is used safely and correctly.

### PLACEMENT

- . Do not use the unit in places which are extremely hot, cold, dusty, or humid.
- . Place the unit on a flat, level surface.
- . Do not restrict the airflow of the unit by placing it in a place with poor ventilation, covering it with a cloth or placing it on a carpet.
- . Do not place the unit close to heat sources.
- . Use the unit only in moderate climates (not in tropical climates).
- . Do not expose the unit to rain or splash with water.
- . Do not place objects filled with liquids, such as vases, on the apparatus.

### SAFETY

- . When connecting and disconnecting the AC power cord from the AC mains outlet, take hold of the plug and not the cord itself. Pulling the cord may damage it and may be dangerous.
- . The AC mains outlet and plug must always be easily accessible.
- . When you are not going to use the unit for a long period of time, disconnect the AC power cord from the AC mains outlet.

### AC VOLTAGE

- . Before use, check that the rated voltage of your unit matches your local voltage.



### CONDENSATION

- . The unit may not work properly if it has condensation inside.
- . Unplug the unit for 1 to 2 hours before turning the power back on, or gradually heat the room up and dry the unit before use.
- . Ensure a minimum distance of 5 cm around the apparatus for sufficient ventilation.
- . Ensure a space of at least 5 cm around the apparatus to enable sufficient ventilation.

Do not cover the ventilation openings

### BATTERIES

- . Pay attention to the environmental aspects of battery disposal.

|   |  |   |
|---|--|---|
|  <p>The lightning flash with an arrowhead symbol within a triangle is a warning sign alerting the user to the presence of dangerous voltage inside the unit.</p> | <div style="text-align: center; background-color: black; color: white; padding: 5px; border: 1px solid black;"> <b>CAUTION</b><br/> <b>RISK OF ELECTRIC SHOCK</b><br/> <b>DO NOT OPEN</b> </div> <p><b>ATTENTION :</b> To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.</p> |  <p>The exclamation mark within a triangle is a warning sign alerting the user to the presence of important instructions accompanying the product.</p> |
|---|--|---|

## TABLE OF CONTENTS

 
|   |   |
|---|---|
| PRECAUTIONS.....  | 1 |
| TABLE OF CONTENTS.....                                      | 2 |
| BOX CONTENTS.....   | 2 |
| LOCATION OF CONTROLS.....                                   | 3 |
| POWER SUPPLY.....   | 3 |
| BASIC OPERATION.....  | 4 |
| RADIO OPERATION.....  | 5 |
| PLAYING AN iPod AND CHARGING THE INTERNAL iPod BATTERY..... | 5 |
| LINE IN FUNCTION.....                                       | 6 |
| MAINTENANCE.....  | 6 |
| TROUBLESHOOTING GUIDE.....                                  | 7 |
| TECHNICAL SPECIFICATIONS.....                               | 7 |

## BOX CONTENTS

1. Unit
2. Instruction manual
3. AC adapter

## LOCATION OF CONTROLS

1. Speakers (2x)
2. **LINE IN** jack
3. **DIMMER LO-HI** switch
4. FM antenna wire
5. iPod docking station and connector
6. **iPod/RADIO/BUZZ** (Buzzer) switch
7. **⏻/ON/AL (ALARM) OFF** button
8. **CLK (Clock) SET** button
9. **TUNING** dial and scale
10. **SNOOZE** button
11. **FM** LED indicator
12. **ON** LED indicator
13. Clock back up battery compartment
14. Clock display
15. **AL** (alarm on) indicator
16. **SLEEP** button
17. **VOLUME** dial
18. **⏮ / ⏭** SKIP/SEARCH buttons
19. **⏮** PLAY/PAUSE button
20. **AC IN 9V** jack

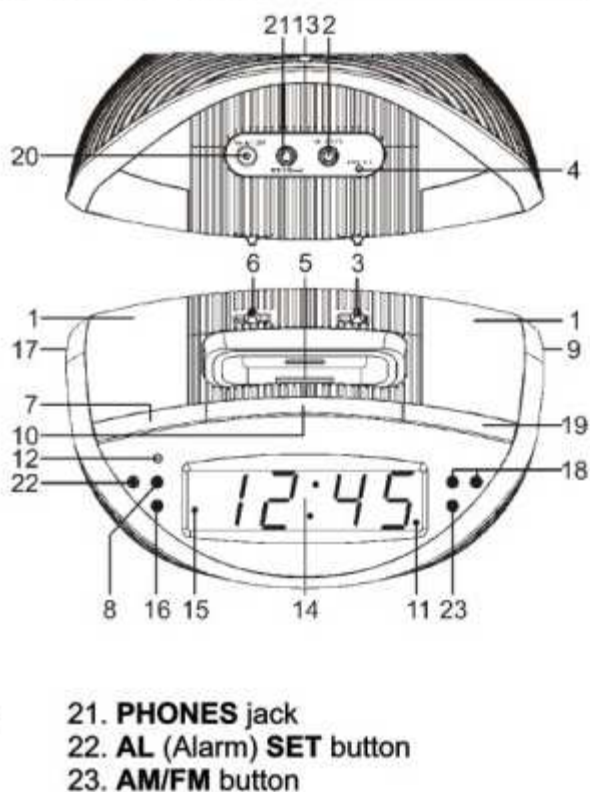

## POWER SUPPLY

### AC power supply

Insert the AC adapter power adapter into the AC mains outlet with a 230V AC ~ 50Hz power source and the other end of the cord into the **AC IN 9V** jack at the back of the unit.

### Installing the clock back up battery

The clock time can be maintained during a power failure by using 2 x AA/ LR06 batteries (not supplied). However, the time may go forward or back slightly and may need resetting.

#### Battery insertion

1. Open the battery compartment on the bottom of the unit by pressing on the catch whilst removing the cover.
2. Insert 2 x AA/ LR06 batteries (alkaline batteries are recommended) into the battery compartment, following the polarity as shown on the diagram inside the compartment.
3. Replace the battery compartment cover

#### Precautions when using batteries

1. Replace only with batteries of the same or equivalent type.
2. Exhausted batteries must be removed to prevent possible leakage.
3. Dispose of the batteries properly in accordance with the environmental regulations in force.

## BASIC OPERATION

### ON/ Standby mode

When it is connected to a power supply (refer to **POWER SUPPLY**), the unit goes to standby mode and the clock time is displayed. Press the **⏻/ON/AL OFF** button to turn on the unit. The **ON** LED indicator lights up. Press it again to go back to standby mode.

### Setting the time

#### Setting the clock time

1. In standby mode, hold down the **CLK SET** button and use the **⏮ / ⏭** buttons to set the hours.
2. Press the **CLK SET** button to confirm and use the **⏮ / ⏭** buttons to set the minutes. Press the **CLK SET** button to confirm the setting.

#### Setting the alarm time

1. Press the **AL SET** button to display the alarm time. Hold down the **AL SET** button and use the **⏮ / ⏭** buttons to set the hours.
2. Press the **AL SET** button to confirm and use the **⏮ / ⏭** buttons to set the minutes. Press the **AL SET** button to confirm the setting.

### Using the alarm

The unit allows you to wake up to a buzzer or to music (AM/FM/iPod).

1. To set the alarm time, follow the steps in "**Setting the alarm time**".

2. To enable the alarm function, press and hold down the **AL SET** button. Set the **iPod/RADIO/BUZZ** switch to **iPod** or **RADIO** if you want to wake up to music or **BUZZ** if you want to wake up to the sound of the buzzer. The **AL** indicator in the bottom left-hand corner of the display lights up.

When you choose to wake up to **iPod**, the alarm clock radio will start to play the last track it played before the unit was switched off. This means you can choose which song you will wake up to.

3. When the preset alarm time is reached, the buzzer or music will start up.
6. To stop the alarm, press the **⏻/ON/AL OFF** button. The alarm will sound again at the same time the next day.
7. To disable the alarm function, press and hold down the **AL SET** button.

Note:

- While the buzzer alarm volume is fixed and cannot be adjusted, the music alarm volume can be adjusted to your desired level using the **VOLUME** dial.
- If **iPOD** mode is selected, make sure the iPod is inserted in the docking station and the volume is set to a suitable level.

### Snooze function

When the alarm sounds, press the **SNOOZE** button to stop the alarm temporarily. It will come on again after 9 minutes. To cancel the **SNOOZE** function and repeat the alarm the next day, press the **⏻/ON/AL OFF** button.

### Sleep function

This function allows you to program the unit so that it switches off automatically after a certain time (up to 1 hour and 59 minutes).

1. In standby mode, press and hold down the **SLEEP** button: "120" is displayed. The unit turns on.
2. Press the **SLEEP** button repeatedly to select a duration: 120, 90, 60, 30, 15, 0.
3. At the end of the set time, the unit turns off automatically.
4. To cancel the sleep function before the preset time has ended, press the **SNOOZE** or **⏻/ON/AL OFF** button to turn off the unit immediately.

### Dimmer control

Slide the **DIMMER LO-HI** switch to set the clock display brightness.

### Connecting headphones

Plug your headphones (not supplied) into the headphones jack at the back of the unit for private listening. The speaker output will be shut off automatically.

## RADIO OPERATION

### Listening to the radio

1. Press the **⏻/ON/AL OFF** button to turn on the unit.
2. Press the **AM/FM** button to select AM or FM. When FM is selected, the FM LED indicator lights up.

Note: In iPod mode, press the **AM/FM** button to switch to radio mode. Press it again to select AM or FM.



3. Turn the **TUNING** dial to select a radio frequency. The tuning scale shows the selected frequency.
4. Adjust sound volume level by turning the **VOLUME** dial.
5. To turn off the unit, press the **⏻/ON/AL OFF** button.

 
#### **For optimum reception**

In FM mode, extend and position the FM antenna to achieve optimum reception.  
In AM mode, orientate the unit to achieve optimum reception.

## **PLAYING AN iPod AND CHARGING THE INTERNAL iPod BATTERY**

### **Installing an adapter on the iPod docking station**

1. Use the iPod adapter supplied with your iPod.
2. Place the adapter on the docking station at the top of the unit with the two tabs facing forwards.
3. To remove the adapter, press at the back of the adapter and pull it up.

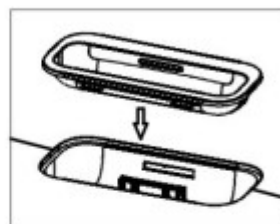

**Note:** Ensure that the iPod adapter is installed in a stable way with good electrical contact.

### **Listening to your iPod**

1. With the iPod adapter installed, gently place the iPod (without the protective cover) in the docking station.
2. Press the **▶||** button to play the music in the iPod.
3. Press the **▶||** button to pause playback. Press it again to resume normal playback.
4. Press the **◀◀ / ▶▶** buttons repeatedly to skip to the previous or next track.
5. Press and hold down the **◀◀ / ▶▶** buttons to move fast forward or back.
6. Alternatively, you can use the buttons on your iPod to carry out these operations.

#### **Note:**

- The internal iPod battery will charge until it is fully charged. Adjust the volume control on the unit to the desired volume level.
- To prevent sound distortion during iPod playback on this unit, the EQ function in your iPod must be set to "Off".
- The docking station is not designed for playing or charging an iPod Shuffle, but it is possible to connect the iPod's line out or headphones jack to the unit's **LINE IN** jack.

## LINE IN FUNCTION

This unit has a **LINE IN** jack, which allows you to connect external audio devices such as MP3 players or earlier iPod models.

1. Connect a 3.5mm stereo connection cable (not supplied) to the **LINE IN** jack at the back of the unit and the headphones/line out jack on your external audio device.
2. Operate your external audio device as usual to select and play music.
3. Adjust the volume controls on both your external audio device and this unit to the desired volume level.

*Note: If an external device is connected to the unit through the **LINE IN** jack and an iPod is inserted in the iPod dock at the same time, the unit will play the music from the **LINE IN** jack only.*

## MAINTENANCE

 
### Care and maintenance

To clean the casing, unplug the unit and wipe off dust and stains with a soft, damp cloth. Never use benzene, thinner or similar chemicals to clean the casing.



If at any time in the future you should need to dispose of this product, please note that waste electrical products should not be disposed of with household waste. Find out where your nearest recycling centre is. Consult your local authority or retailer for more details. (Waste Electrical and Electronic Equipment Directive).

## TROUBLESHOOTING GUIDE

| Problems   | Recommendations   |
|--|---|
| 1. The player or display is not working properly | 1.1 Press the  /ON/AL OFF button to go to standby mode and press it again to turn the unit back on.<br>1.2 Reset the player by unplugging the AC power cord for few seconds and plugging it back in. |
| 2. No sound, poor sound                          | 2.1 Check the connections.<br>2.2 Use the <b>AM/FM</b> or <b>▶  </b> button to select the correct mode.   |
| 3. Noise or distorted sound in radio mode        | 3.1 FM mode: Extend and position the FM antenna to achieve the best reception.<br>3.2 AM mode: Position the unit to achieve optimum reception.  |
| 4. No sound, poor sound in iPod mode             | 4.1 Check that you have chosen the correct dock adapter.<br>4.2 The EQ function in your iPod must be set to "Off".<br>4.3 Your iPod is not supported by the docking station. Connect your iPod to the unit via the <b>LINE IN</b> jack.   |

## TECHNICAL SPECIFICATIONS

### Radio

Tuning range

FM: 87.5 – 108 MHz

MW: 540 – 1600 kHz

Antenna

FM: wire antenna; AM: built-in ferrite bar

### General

Output power

2 x 0.8 W

Power consumption

14 W

Speaker

2 x 2 1/4" (57.2 mm) 8 Ohm

Power source

Input: AC 230V ~ 50Hz

Output: AC 9V

Clock back up

DC 3V (2 x 1.5V): 2 x AA/LR06 batteries

Dimensions

73 (H) x 180 (W) x 160 (D) mm

Weight

0.47 Kg

Note: Due to continuing improvements, the technical specifications are subject to change without notice.